


Press Key time > 3 Seconds
Press Key time < 1 Second


User Menu

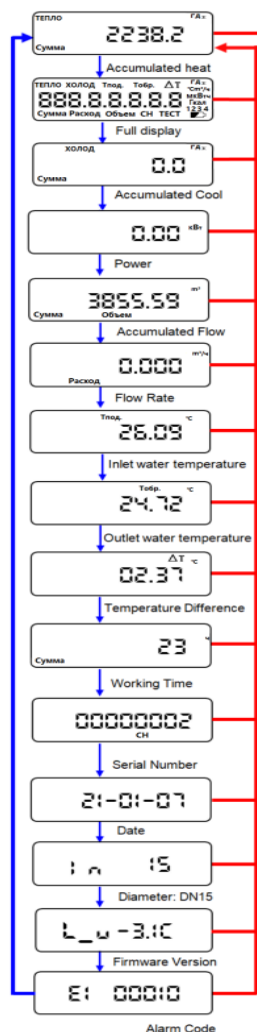


Alarm Code

Test Menu


TEST flicker in test mode

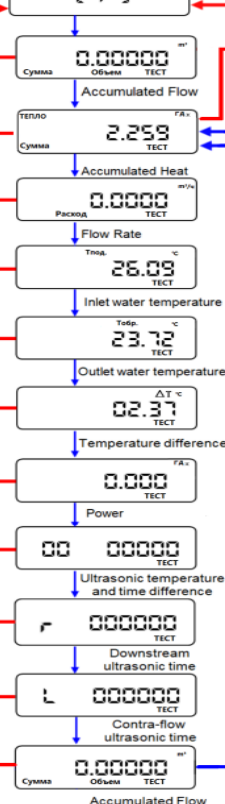


HeatTest Mode

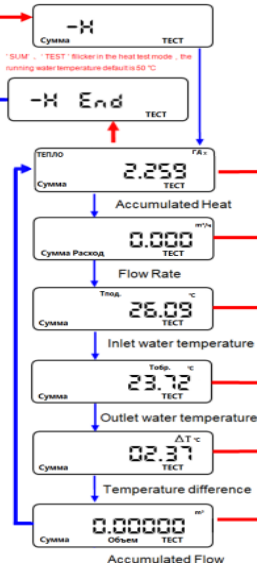

Info. Menu

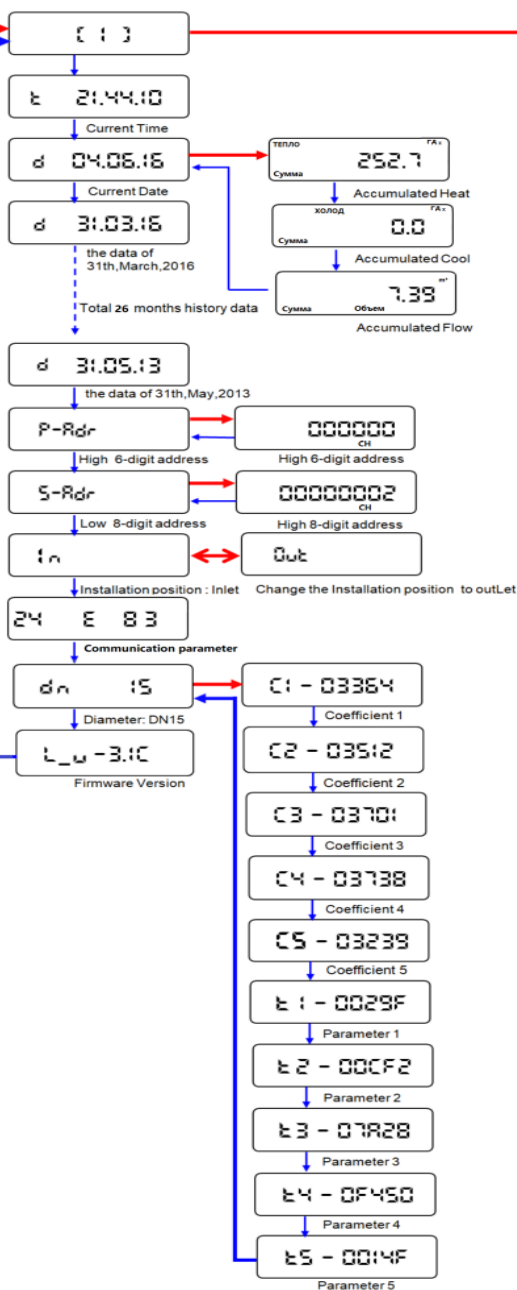

Error Menu

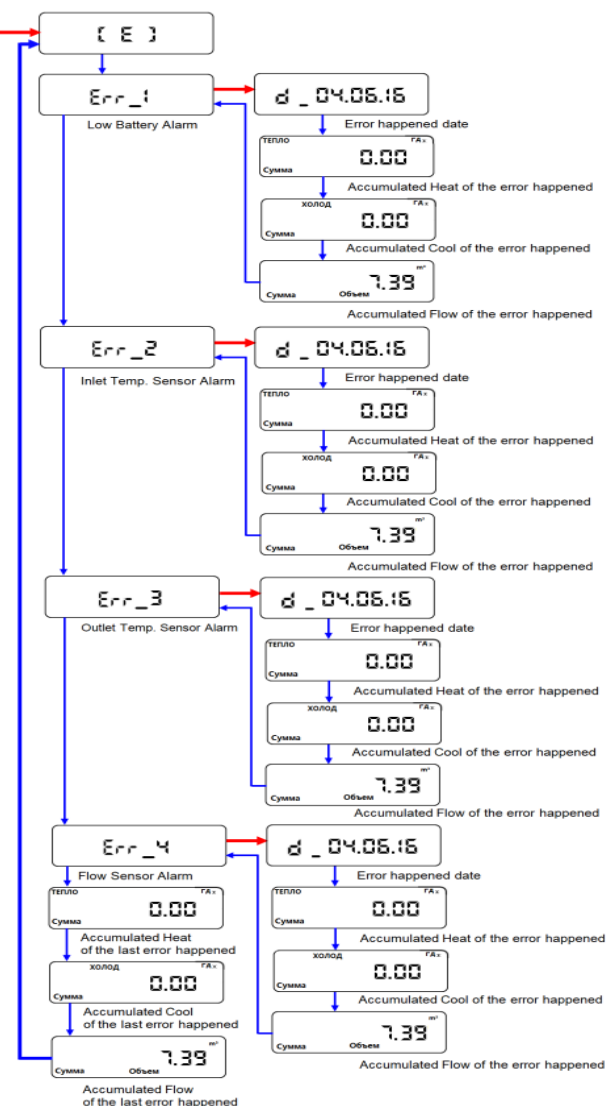

E: 00010

Battery voltage
Flow sensor & empty pipe
Outlet temperature sensor
Inlet temperature sensor
Installation position

0: Normal
1: Failure or Empty
2: Normal
3: Failure
4: Normal
5: Failure
6: Inlet
7: Outlet